


How to Contact Us

- To find out more about **Carrier Apparatus** products, visit us on the web at:
<http://cw.commscope.com/>
- For technical assistance regarding Carrier Apparatus products: contact your local CommScope account representative or CommScope technical support at 1-800-344-0223.
- Report any missing or damaged parts to CommScope customer service in Omaha, Nebraska, at 1-866-539-2795.

STEP 1—INSTALL LABELS WITH PANELS MOUNTED FROM REAR OR FRONT

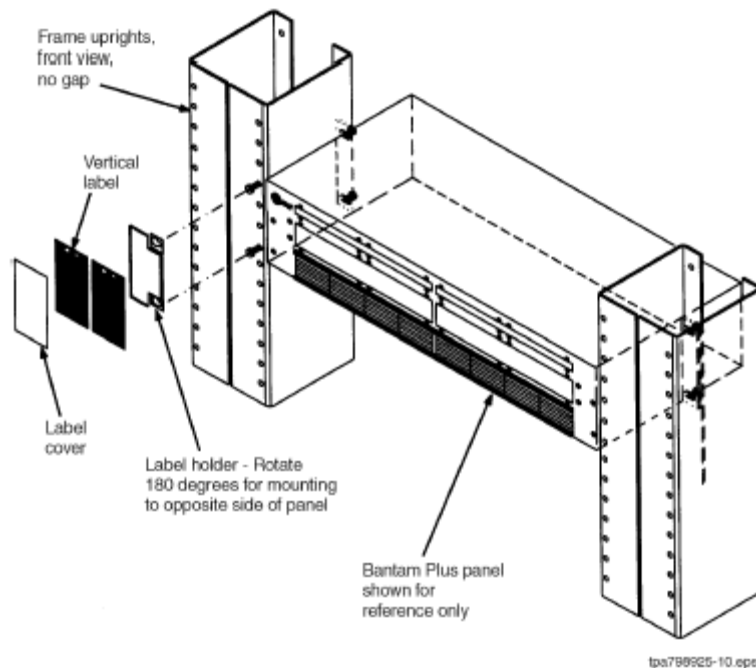

1. For a rear mounted panel, at the front of the frame (wide flange), install four No. 12-24 screws in the hole positions aligned with the top and bottom of the panel front (two screws on either side of the panel). Do not tighten the screws at this time.

Note: For front mounted panels, four mounting screws must be loosened.

2. Install the label holder on the screws just installed by placing the large end of the keyhole-type slots in the label holders over the screws and adjusting the holders left or right to position the screws in the small end of the keyhole-type slots and tighten the screws.
3. Insert the approximately sized 2- x 4-inch or 4- x 4-inch labels in the label holders just installed.
4. Install the plastic cover over the label.

Note: Either the 2- x 4-inch or the 4- x 4-inch label holders may be used on the panel regardless of bay spacing.

General

Separately packaged parts are available for replacement of damaged parts or for special order requirements.

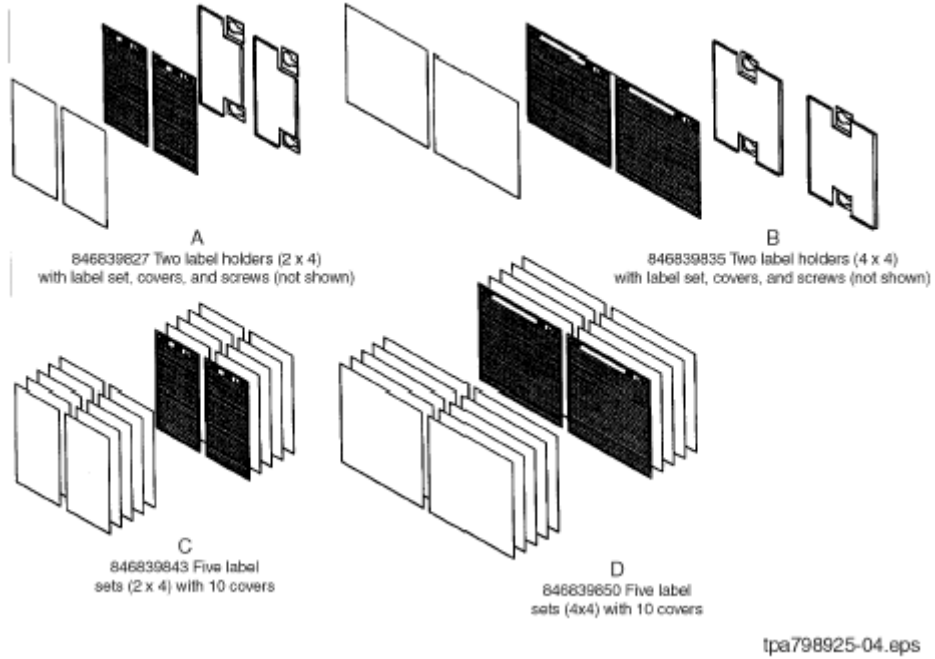


Figure	Material ID	Description
A	846 839 827	Two 2 x 4 label holders with covers and label set.
B	846 839 835	Two 4 x 4 label holders with covers and label set.
C	846 839 843	Five 2 x 4 label sets with 10 covers.
D	846 839 850	Five 4 x 4 label sets with 10 covers.