

## Cleaning a Tactical Fiber Optic Connector/Adapter

### Contents

---

This instruction sheet covers the cleaning of a Tactical Fiber optic Connector and Adapter. Cleaning should be performed when there is any loss or degradation of signal.

Contents .....	1
General.....	1
1) Tools needed: Alcohol, Q-Tips, Kimwipes.....	1
2) Cleaning Results .....	2
3) Cleaning the Receptacle.....	3
4) Cleaning the plug .....	4
5) Assistance Information.....	4

### General

---

This document will describe the tools and procedure for cleaning the termini on a TFOL connector.


**1) Tools needed:** Alcohol, Q-Tips, Kimwipes.



## 2) Cleaning Results

These pictures show the end face of a termini before and after the cleaning process:

Before cleaning

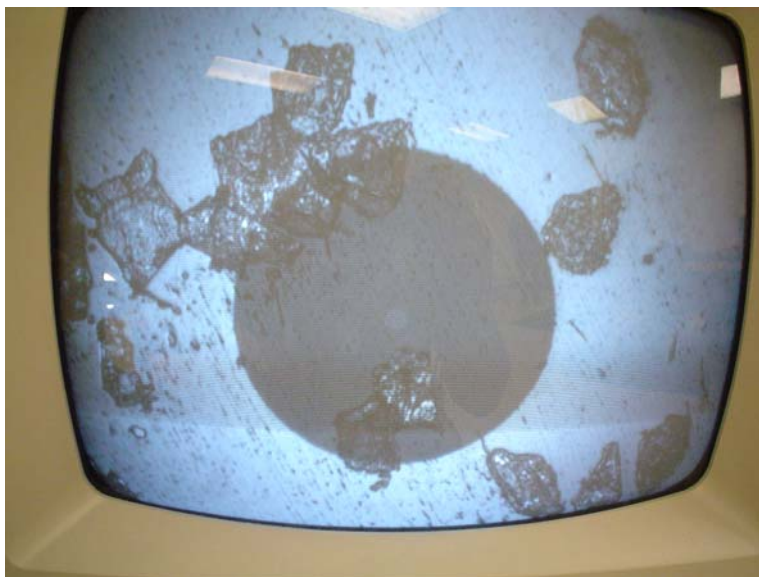

After cleaning



### 3) Cleaning the Receptacle

- Apply Alcohol to a pad and clean the ends of the termini with a single stroking motion.
- Use a clean Kimwipe to remove any leftover alcohol.



#### 4) Cleaning the plug

- Apply Alcohol to a q-tip and clean the ends of the termini with a single stroking motion.
- Use a clean q-tip to remove any leftover alcohol.



#### 5) Assistance Information

- For more information, contact your CommScope Sales Representative.
- For assistance, call 1-800-544-1948 or 828-459-5000 or visit our website [www.uniprisesolutions.com](http://www.uniprisesolutions.com)